

■ BIOS Utility □ □ □ □ □ □ □ □ □ □

```
----- BIOS Utility -----
System Information
Basic System Settings
Startup Configuration
Onboard Devices Configuration
System Security

Load Default Settings
-----
```

BIOS Utility		
	BIOS default	BIOS value

Load Default Settings

■ System Information () () () () () ()

```

----- System Information -----
CPU Type & Speed ----- Intel Pentium(R) 4 Processor XXXX MHz
Floppy Disk Drive ----- 1.44MB 3.5-inch
Hard Disk Drive ----- XXXXX MB
HDD Serial Number ----- XXXXXXXXXXXX
System with ----- XXXX Attached
System BIOS Version ----- V3.5 R01-XXX
VGA BIOS Version ----- BK6.0.0 XXXXX.XXX.XXX.XXX.XXX *1)
KBC BIOS Version ----- V2.XX-XX
Memory Size ----- XXX MB
LAN Device ----- Exist (MAC Address=xx:xx:xx:xx:xx:xx)

-----
*1) 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0

```

System Information	
	BIOS default
CPU Type & Speed	Intel Pentium(R) 4 Processor XXXX MHz
Floppy Disk Drive	1.44MB 3.5- inch
Hard Disk Drive	XXXXX MB
HDD Serial Number	XXXXXXXXXXXX
System with	XXXX Attached
System BIOS version	V3.5 R01- XXX
VGA BIOS Version	XXXX
KBC BIOS Version	V2.XX- XX
Memory Size	XXX MB
LAN Device	Exist (MAC Address=xx:xx:xx:xx:xx:xx)

[illegible]

```
Memory Size : 00 00 00 00 00 00 00 00 00 00 00 00
LAN Device 00 00 LAN 00 00 00 00 00 00 00 00
```

■ Basic System Settings

```
----- Basic System Settings -----
Date ----- [XXX nmmdd, yyyy]
Time ----- [hh: mmss]
-----
```

Basic System Settings	
	BIOS default
Date	XX[] [] Sun Sat [] [] [] mmm[] [] ari Dec[] dd[] 01 31 yyyy[] 1980 2099
Time	hh[] 00 23 mm[] 00 59 ss[] 00 59

[illegible]

■ Startup Configuration ☐ ☐ ☐ ☐ ☐ ☐

```

----- Startup Configuration -----
Boot Display ----- [ Both ]
Screen Expansion ----- [ Disabled ]
Resume on LAN MODEM Access ----- [ Enabled ]
Hbtkey Beep ----- [ Enabled ]
Fast Boot ----- [ Enabled ]
Boot from LAN ----- [ Disabled ]
CPU Power Management Mode ----- [ Disabled ]

Boot Drive Sequence:
1st. ----- [ Floppy Disk ]
2nd. ----- [ CD ROM ]
3rd. ----- [ Hard Disk *2) ]
4th. ----- [ ----- ]

Intel (R) SpeedStep(TM) technology --- [ Automatic ]
-----

```

Startup Configuration		
	BIOS default	BIOS value
Boot Display	Both	Auto
Screen Expansion	Disabled	Enabled
Resume on LAN Access	Enabled	Disabled
Hotkey Beep	Enabled	Disabled
Fast Boot	Enabled	Disabled
Boot from LAN	Disabled	Enabled
CPU Management Mode	Disabled	
Boot Drive Sequence:		
1st.	Floppy Disk	Floppy Disk/ Hard Disk/ CD- ROM LANDesk(R) Service Agent
2nd.	CD- ROM	
3rd.	Hard Disk	
4th.	□ □	
Intel(R) SpeedStep(TM) Technology	Automatic	Maximum Performance/ Battery Optimized/ Reverse

[illegible]

Boot Display ☐ Both ☒ Auto

Screen Expansion

Serial Port 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Base Address 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
IRQ 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Parallel Port 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Base Address 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
IRQ 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Operation Mode 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
ECP DMA Channel 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Default Wireless Device 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 LAN/Bluetooth 00 00 00 00 00 00 00 00 00 00

■ System Security 00 00 00 00 00 00 00 00

----- System Security -----

Setup Password ----- [None]

Power-on Password ----- [None]

Hard Disk Password ----- [None]

System Security

	BIOS default	BIOS value
Setup Password	None	Present
Power-on Password	None	Present
Hard Disk Password	None	Present

Setup Password 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Power-on Password 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Hard Disk Password 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00